

CONNECTIONS LOUNGE



Connections Lounge, features the durability of hardwood frames combined with the flexibility of on-site construction. This allows the furniture to fit through any doorway, or up any flight of stairs. The heavy duty nylon connectors have threaded metal inserts for secure assembly. Each component can be replaced for a low cost repair solution.



FLAIR ARM

SOFA

003-02-1000
82 x 32 x 35 in

LOVESEAT

005-02-1000
58 x 32 x 35 in

CHAIR

007-02-1000
35 x 32 x 35 in



ROLL ARM

SOFA

003-02-3000
82 x 32 x 35 in

LOVESEAT

005-02-3000
58 x 32 x 35 in

CHAIR

007-02-3000
35 x 32 x 35 in



TIGHT BACK - WOOD LEG

SOFA

003-02-5000
79 x 35 x 35 in

LOVESEAT

005-02-5000
56 x 35 x 35 in

CHAIR

007-02-5000
33 x 35 x 35 in



TIGHT BACK - METAL LEG

SOFA

003-02-7000
77 x 35 x 35 in

LOVESEAT

005-02-7000
54 x 35 x 35 in

CHAIR

007-02-7000
32 x 35 x 35 in



OTTOMAN

009-02-3000
28 x 24 x 18 in



OTTOMAN - METAL LEG

009-02-7000
28 x 24 x 18 in



CONNECTIONS LOUNGE SPECIFICATIONS:

FRAMES

- Due to the various structure designs of our products, we use a combination of selected 5/4 kiln-dried hardwood in combination with 7/8" hardwood plywood engineered frames. Stress joints are CNC joined, corner blocked, glued and screwed.

SEAT SUSPENSION

- A wire grid permalator manufactured by the Flexolator division of Leggett & Platt, fastened to the frame in front, with helical springs fastening the grid in back to create the right seat pitch.

ASSEMBLY CONNECTORS

- Arm and back to deck- Heavy duty nylon connectors with threaded metal inserts for secure connection.
- Arm to back- steel tapered connector for secure connection.

SEAT CUSHIONS

- Standard seat cushion: 1.8 density ultra-cell foam core with 2 ounce wrapped polyester fiber, encased in a non-woven cover.

BACK CUSHIONS

- Standard back cushion: Channeled nonwoven cover, filled with premium virgin conjugated polyester fiber.

POLYPROPYLENE DOUBLE COVER

- Outside arms and backs of upholstery are double covered and padded.


PACKAGING

- All products packed with 275 test carton with inner polybag and padding.

FINISH OPTIONS:



Mahogany

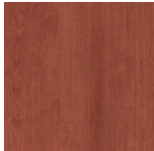

Cherry


CONNECTIONS UPHOLSTERY

ASSEMBLY INSTRUCTIONS:

OUR CONNECTIONS STYLE UPHOLSTERY CAN BE EASILY ASSEMBLED WITHOUT ANY TOOLS. PLEASE FOLLOW THE DIRECTIONS BELOW.

- 1) Remove and unwrap all the components and the hardware bag. You should have the following:
 - 2 arms (with 2 feet per arm)
 - 1 Seat Frame
 - 1 Back Frame
 - Seat & Back Cushion (quantity depends on chair, loveseat or sofa)
 - 3 Prong knobs and washers (quantity depends on chair, loveseat or sofa)
- 2) Turn seat frame so front side is on the floor. Note: the backside has drilled holes at edge of frame.
- 3) Attach the arms by inserting the pre-installed bolts through the matching holes in the seat frame. Make sure the metal "keyslot" bracket is located at the back of seat frame. From the underside of seat frame use (2) washers and (2) 3 prong knobs to loosely attach each arm to frame. Do not tighten knobs completely at this point.
- 4) Turn the seat frame and 2 arm assembly upright. Align the metal button studs on sides of back frame with keyslot brackets on inside of each arm. Then be sure that the preinstalled bolts at bottom of back frame are aligned with holes in seat frame. Once aligned, gently push down on back to set it into the keyslots.
- 5) Turns assembly into front edge, reach underneath and attach back with washers and 3 prong knobs, including the ones that secure the arms.
- 6) Attach wood feet to arms if not already in place. Locate threaded holes in each arm at front and back. Screw in foot until snug with arm frame. Align sides of feet with sides of arms.
- 7) Turn the piece onto its feet and install seat with back cushions.

ASSEMBLY IS COMPLETE. IT IS A GOOD IDEA TO RE-TIGHTEN THE KNOBS EVER MONTH.

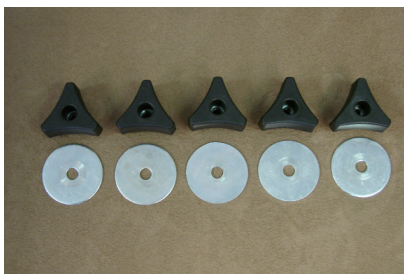

3 PRONG KNOB & WASHER



KEYSLOT BRACKET



CHAIR WITH ONE ARM



CHAIR WITH TWO ARMS



CHAIR COMPLETE WITH CUSHIONS